 


INFINITY 8500 SERIES QUICK START GUIDE

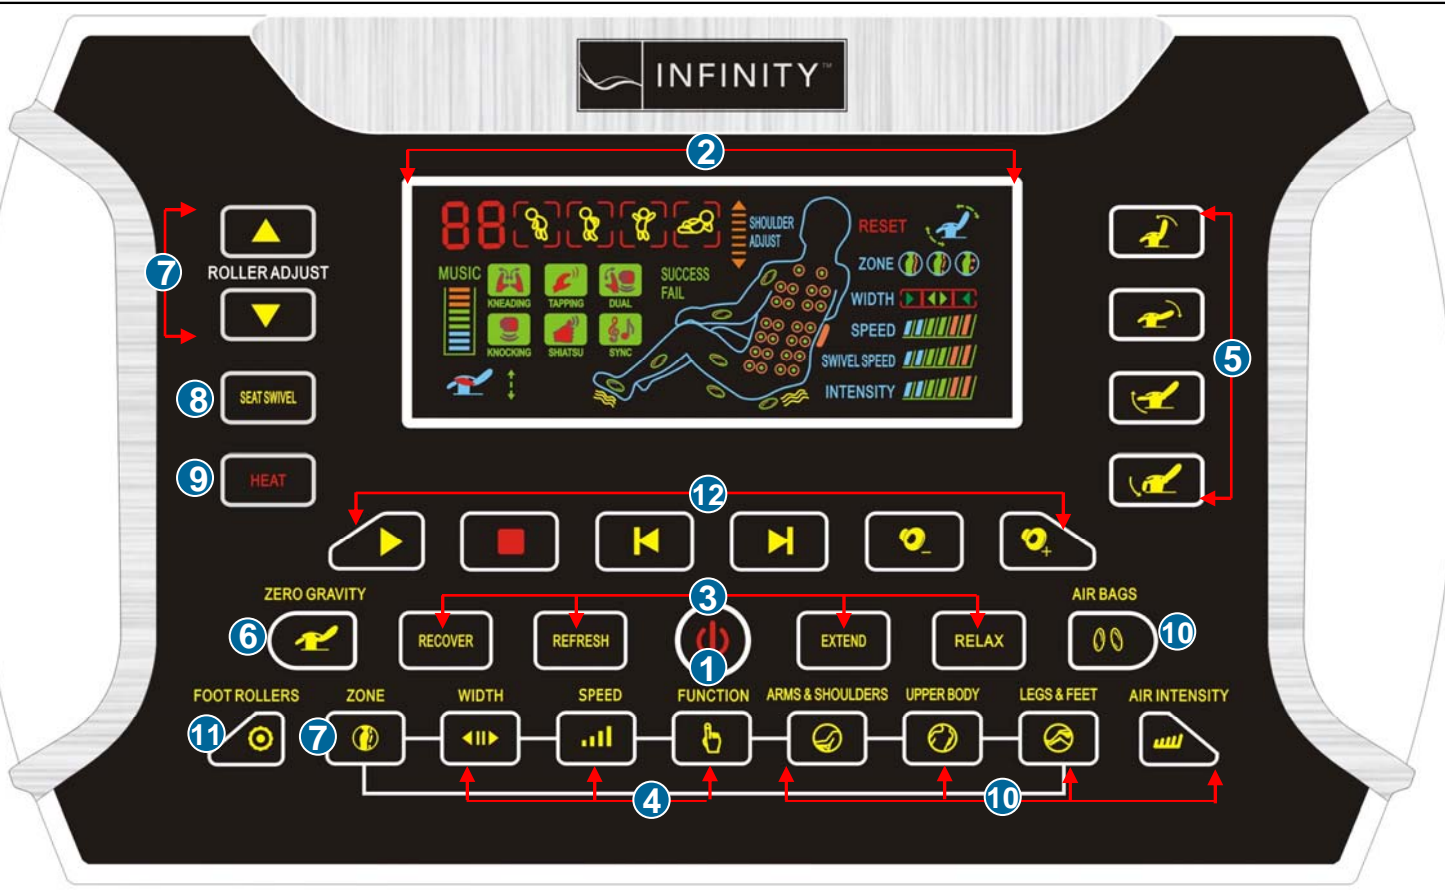

1 POWER BUTTON ON/OFF

2 SCREEN – View massage options on the dynamic guide screen.

3 4 PRE-SET PROGRAMS

Select from four pre-set massage programs. Press again to cycle through time settings of 45/30/20 or 10 minutes. To end, press on/off button.

RECOVER – Recover after a physically demanding day, with this strenuous and invigorating, full body massage.

REFRESH – Revive and revitalize your system with a gentle full body massage.

EXTEND - Gentle stretching and pulling loosens stiff muscles and joints, enhances flexibility.

RELAX – Rest and relax with a soothing moderate massage featuring air pressure massage for the neck and shoulders.

4 MANUAL ROLLER CONTROLS

Press **Function** to select manual massage programming. Continue to press “Function” to rotate through 6 different massage techniques.

- Kneading • Tapping • Combo Knead/Knock
- Knocking • Shiatsu • Music Sync

Width – Adjust Roller Width **Speed** – Adjust Roller Speed

5 RECLINE CONTROLS

Press and hold any of the four chair icons to adjust both the back and leg rest to desirable positions.

6 **ZERO GRAVITY** – Select to achieve Zero Gravity position, weightless-type posture. Press again for a deeper recline, and again to turn off.

7 TARGETED MASSAGE

While still in manual “Function” mode, you can begin to target specific areas of the back.

Zone – Select once for a regional massage, and again to pause the rollers in a specific area.

Roller Adjust – Use “Roller Adjust” to effect micro-movements of the rollers, to pinpoint trouble areas.

8 **SEAT SWIVEL** – Press for seat/waist twisting airbag function. Continue to press button through 3 different intensities.

9 **HEAT** – Enable lumbar heat, allow a few moments for heat effect to be felt.

10 MANUAL AIR BAG CONTROLS

Enjoy a full or directed airbag massage.

Air Bags – Select for full airbag massage.

Arms&Shoulders – Select for A/S massage.

Upper Body– Select for upper body massage.

Legs&Feet – Select for foot/sole/calf massage.

Air Intensity – Press to increase/decrease the strength and intensity of air bags.

11 **Foot Rollers** – Press to turn on foot/sole roller massage. Continue to press button through 3 increasing intensities.

12 **MUSIC CONTROLS** – See Reverse.

INFINITY 8500 SERIES QUICK START GUIDE

Once your chair is plugged in and the power button on the rear lower panel is in the on position, you can begin using your massage chair. Start by pressing the purple power button in the middle of your remote.

Auto Programs - You can choose one of the four auto programs to the left and right of the power button 1) **Recover** 2) **Refresh** 3) **Extend** 4) **Relax**. The programs take you through a fully automated massage each addressing your specific needs. The massage time can be adjusted by pressing the specific program button repeatedly. Auto timer options are 45, 30, 20, and 10 minutes.

Custom Massage - After pressing the power button then press the "**Function**" button directly below the power button. This activates the first of the six roller massages 1) Kneading 2) Tapping 3) Combo –Knead/Tap 4) Knocking 5) Shiatsu 6) Music Sync. To change to the next massage simply press the "**Function**" button again. While enjoying any custom massage, you can further customize by selecting the "**Speed**" and/or "**Width**" buttons to the left of the "**Function**" button, *when lit up*.

The "**Zone**" button, when pressed the first time will focus the rollers in the current region of massage. If you press the "Zone" button again it will maintain the current roller position and massage that specific area. The "**Roller Adjust**" buttons at the top left of the remote allow for micro-adjustments to pin point specific areas.

To enjoy a foot massage, activate the foot rollers with the "**Foot Rollers**" button. The three speeds can be changed by touching the "Foot Rollers" button repeatedly.

Additional customization can be enjoyed by pressing the three buttons to the right of the "**Function**" button: 1)"**Arms&Shoulder**," 2)"**Upper Body**," & 3)"**Legs&Foot**." Airbags will be activated for each specific region. The "**Air Intensity**" button to the right of the "**Legs & Foot**" button increases/decreases airbag intensity to your personal preference.

The "**Seat Swivel**" button activates the swivel seat that aids spinal correction. Further adjust the speed by touching the "**Seat Swivel**" button repeatedly.

Select "**Heat**" to activate the Lumbar Heat. Allow a few minutes for the heat benefits to be felt.

Music – Relax to your own music selection using a USB Flash Drive. Download music onto any USB Device, plug it into the port on the rear of the chair base next to the power cord. Music controls are located in the middle of your remote above the power button. By selecting "**Function**" 6 times, you can sync your entire massage in rhythm with your music. Controls include **Start / Stop / Rew / Fwd / Vol Down / Vol Up**.



INFINITY 8500 SERIES QUICK START GUIDE

